


Inbetriebnahme


- EN Commissioning
FR Mise en service
IT Messa in funzione
NL Ingebruikneming
ES Puesta en servicio
PT Colocação em serviço
PL Uruchomienie
SLO Zacetek obratovanja
HU Üzembevétele
SK Uvedenie do prevádzky

D4582-002&BDC © 11-2004

1

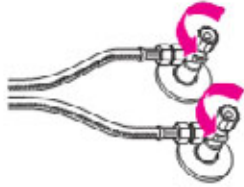

2

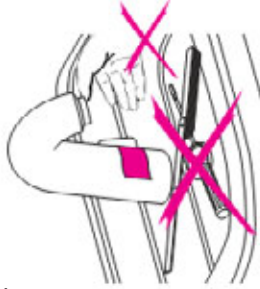

3




4

15 sec.



5

Test

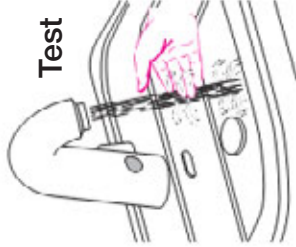

Reset

