

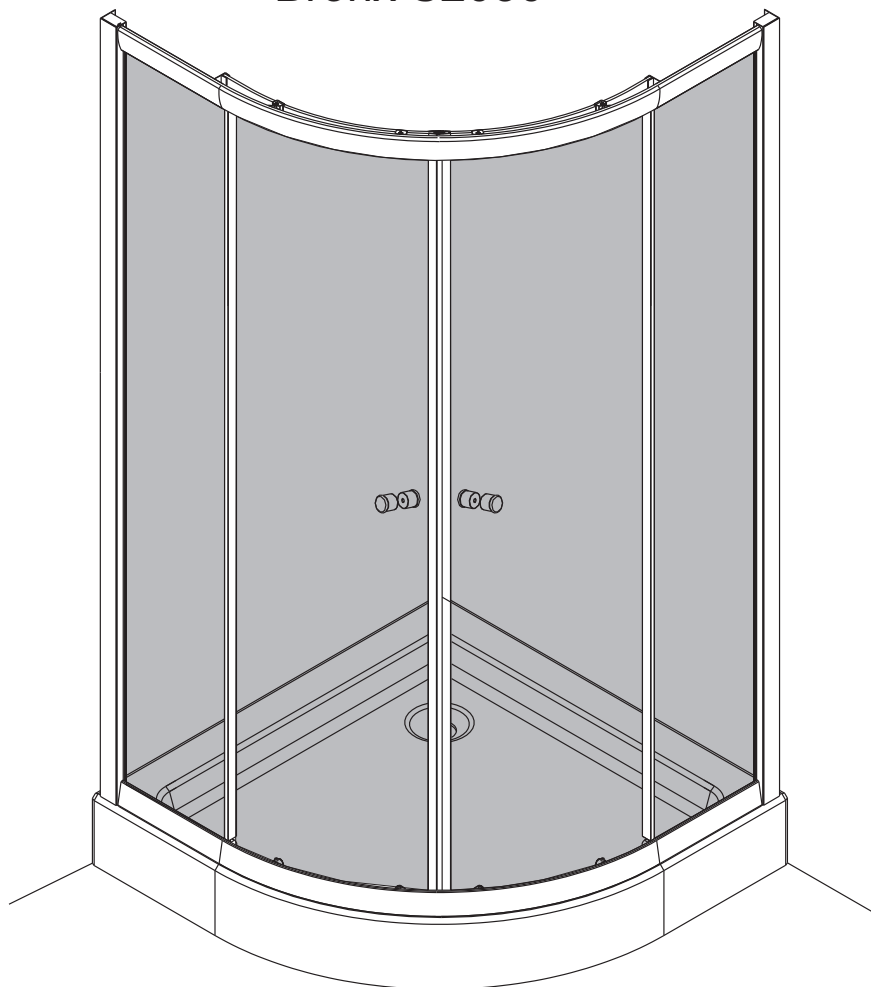
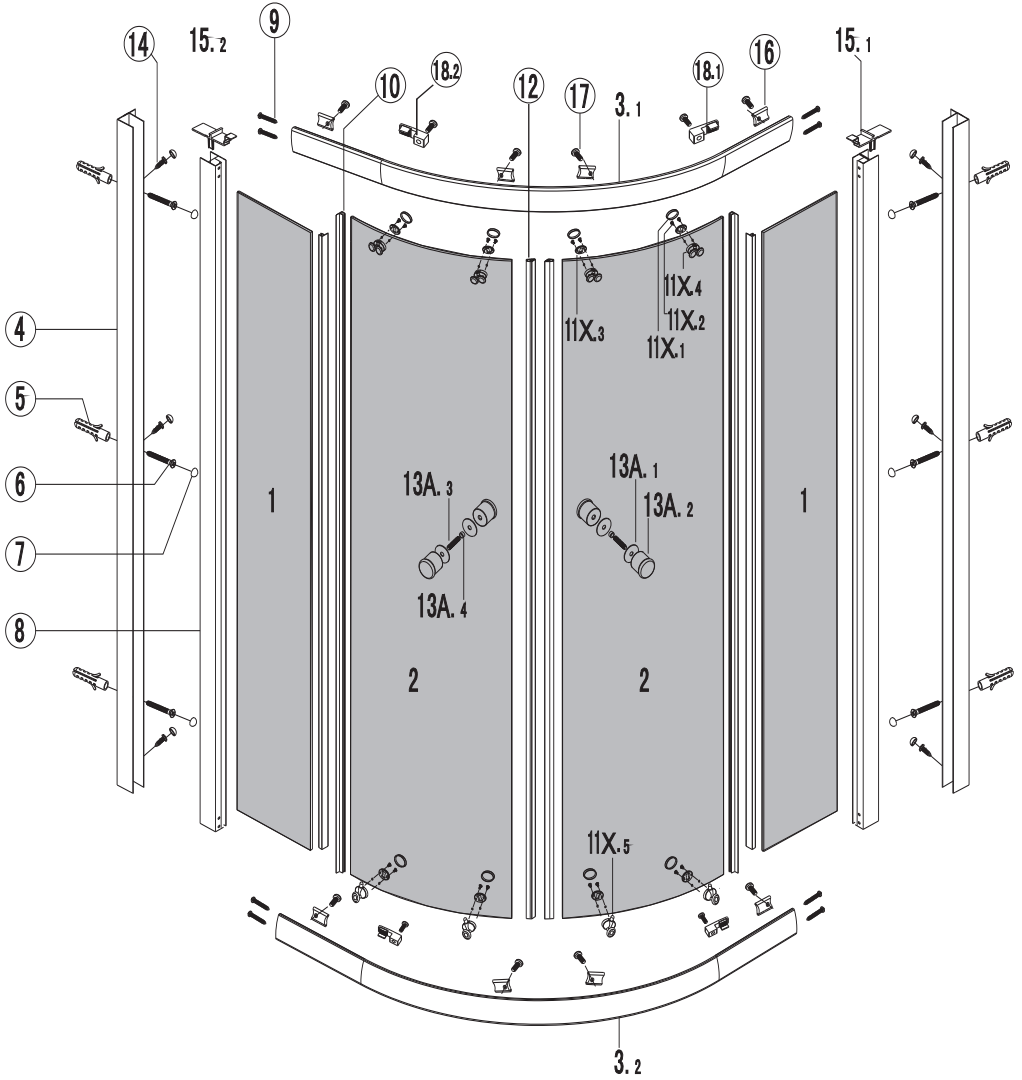


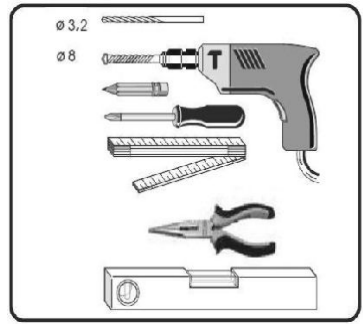


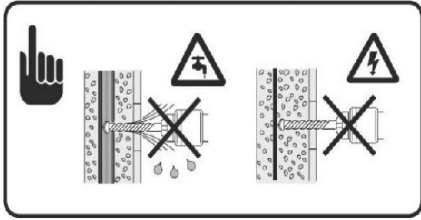




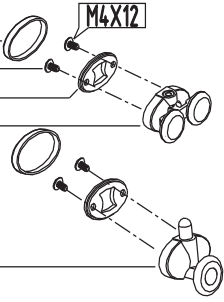


Instrukcja montażu kabiny








Shower cabin mounting instructions

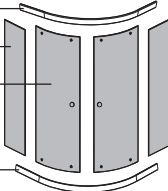Bronx S2030










NO.	Designation	Pieces
3.1 1 2 3.2		X1 X2 X2 X1
4		X2
5	 $\varnothing 8$	X7
6	 \oplus ST4X35	X7
7		X13
8		X2
9	 \oplus ST4X3	X9
10		X4
11		X8 X16 X8 X4 X4
12		X2
13		X4 X4 X2 X2




NO.	Designation	Pieces
14	 \oplus ST4X10	X7
15.1 15.2		X1 X1
16		X8
17	 \oplus ST4X10	X13
18.1 18.2		X2 X2
	 \oplus $\varnothing 8$  $\varnothing 3.2$	

1.

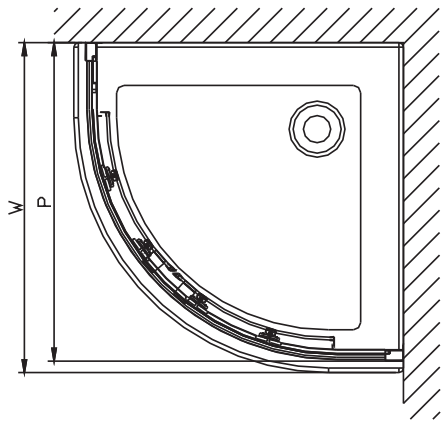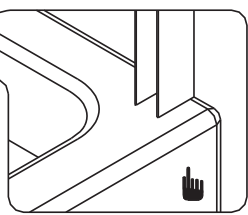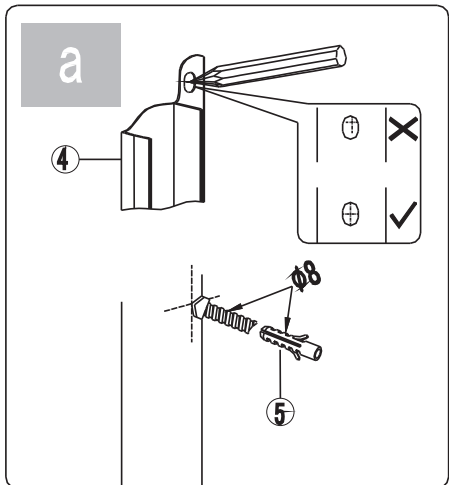
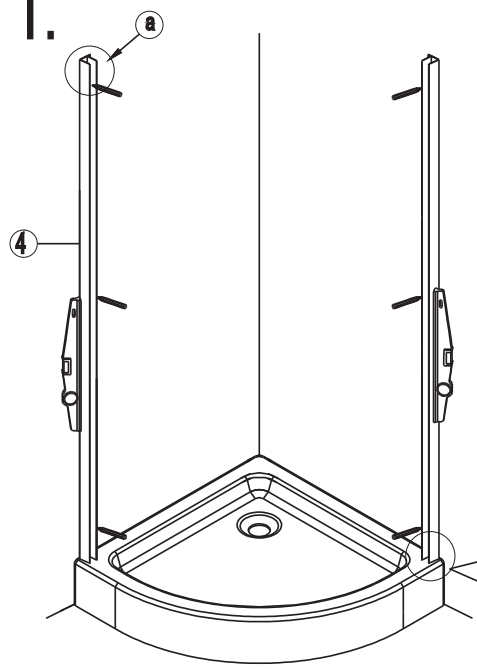


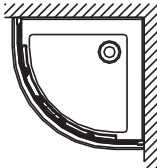	regulacja
90	88,5-91 cm



2.

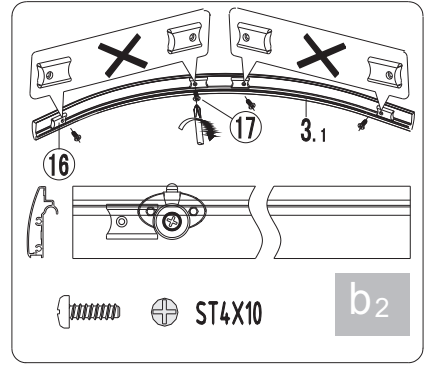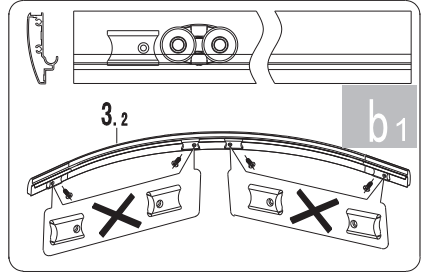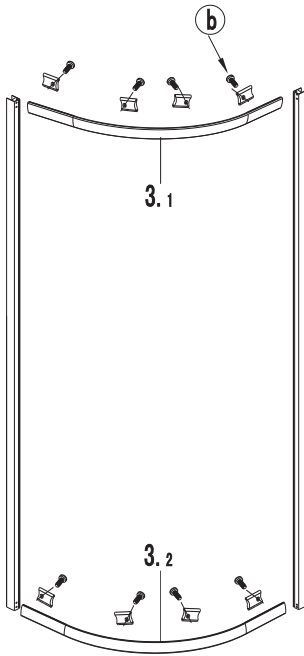



3.

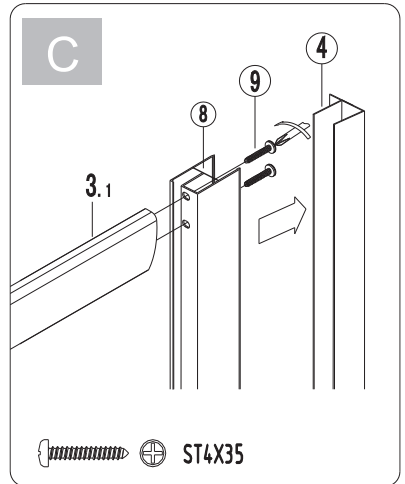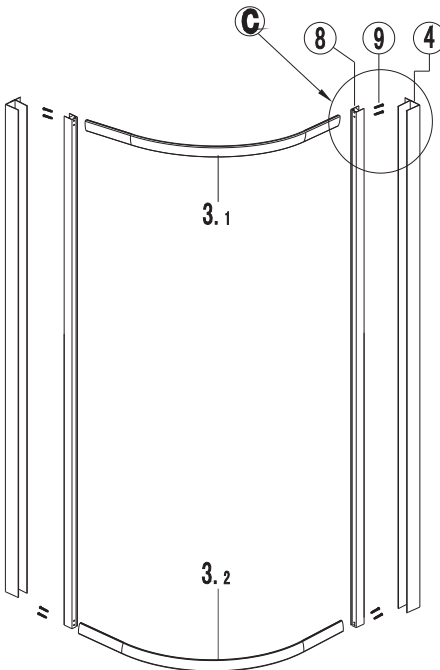



4.

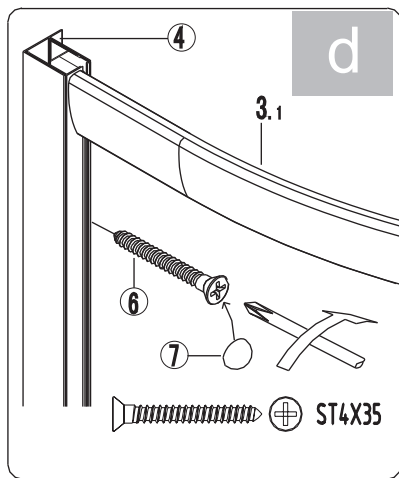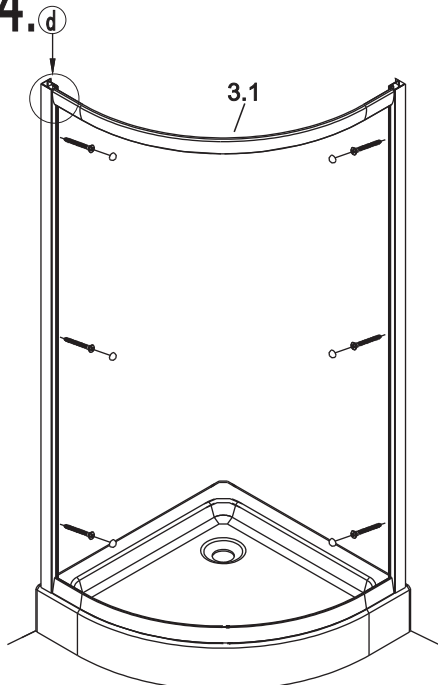



5.

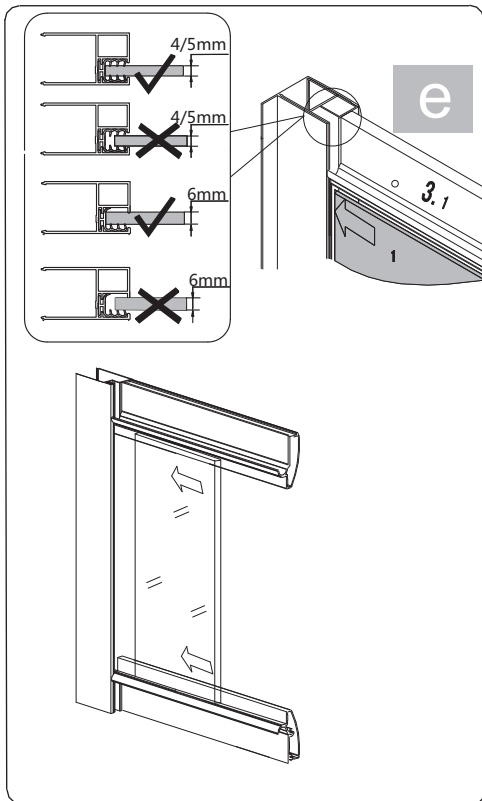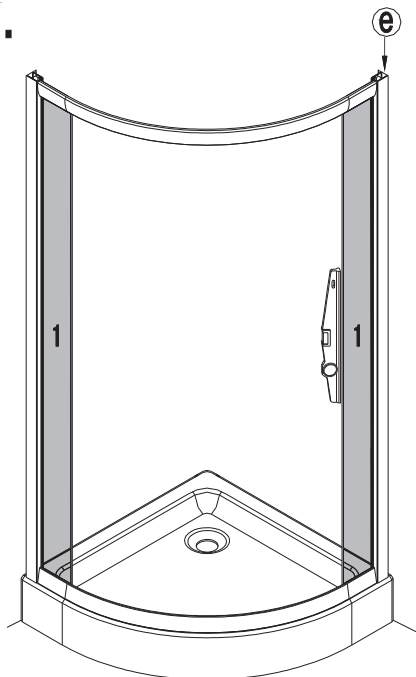






6.

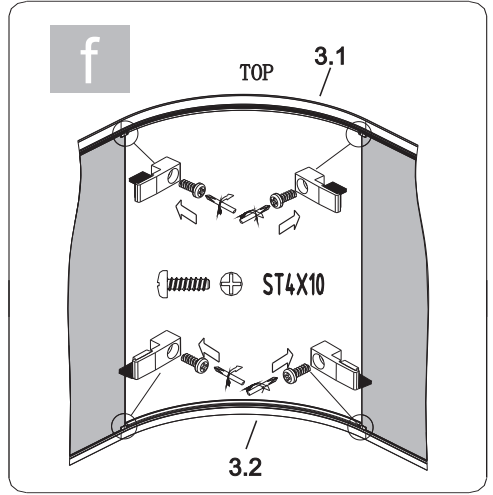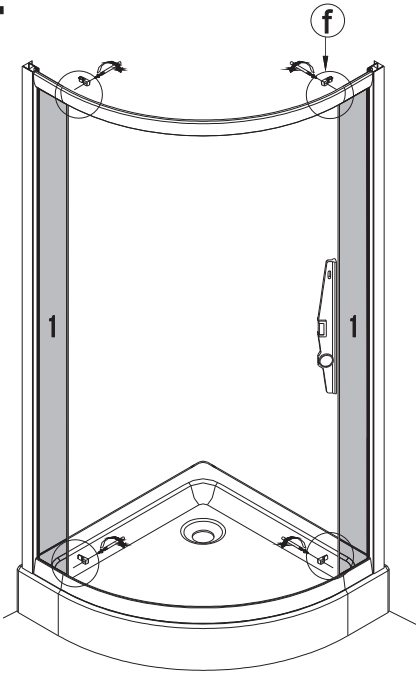




7.

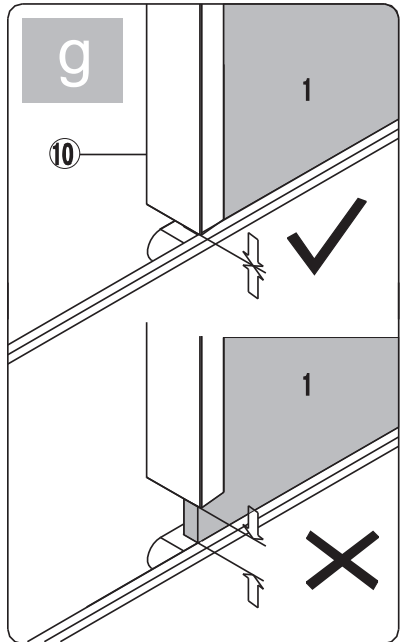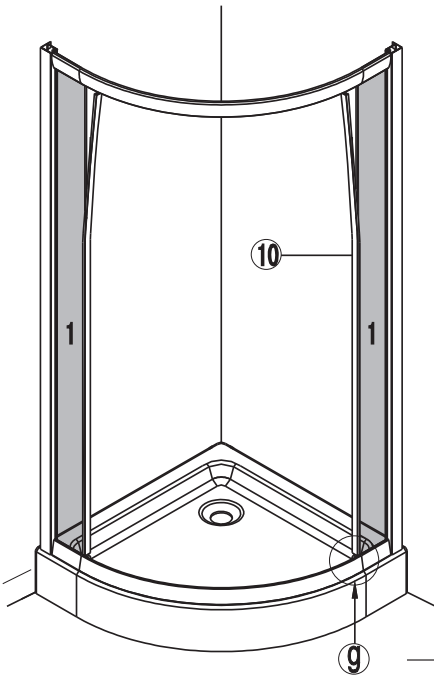




8.

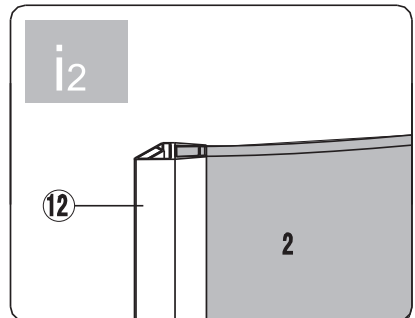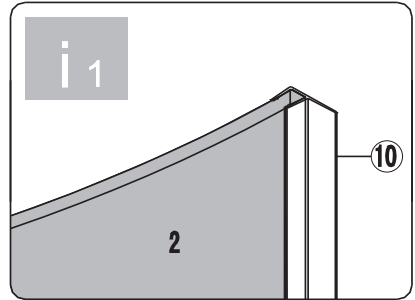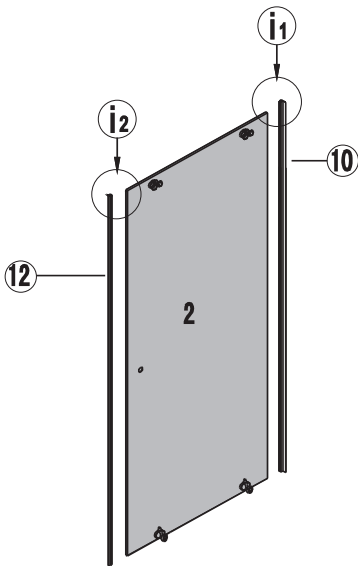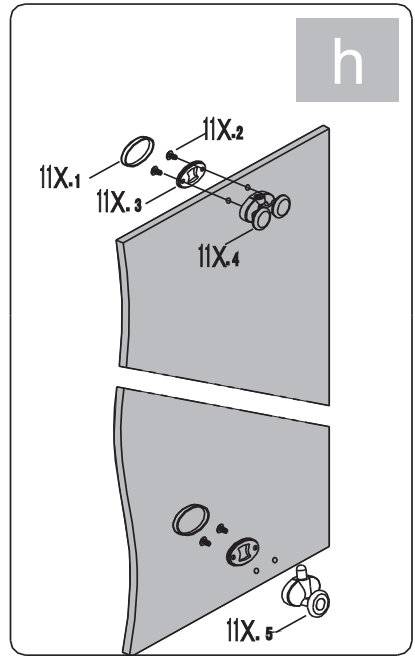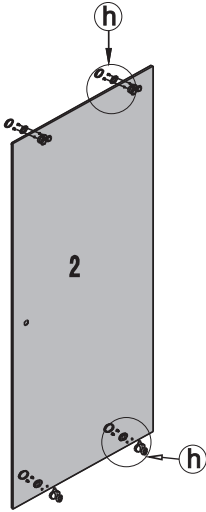



9.

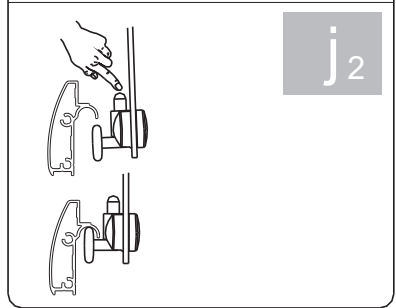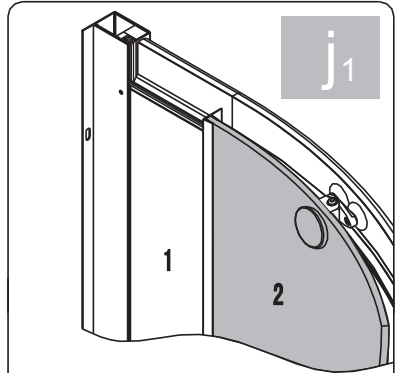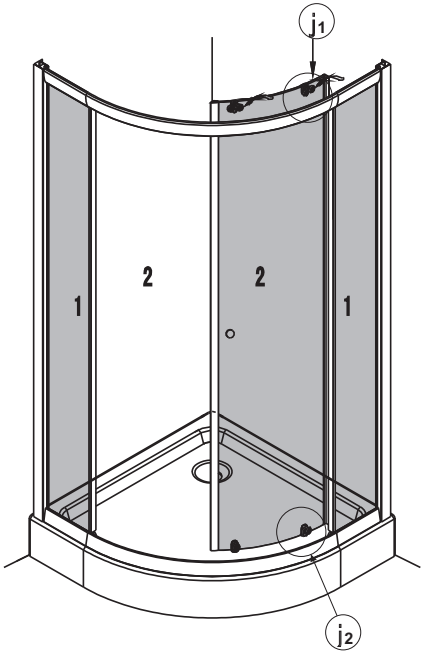



10.

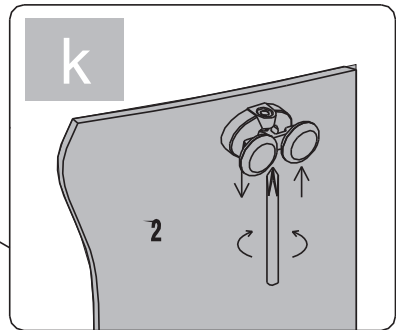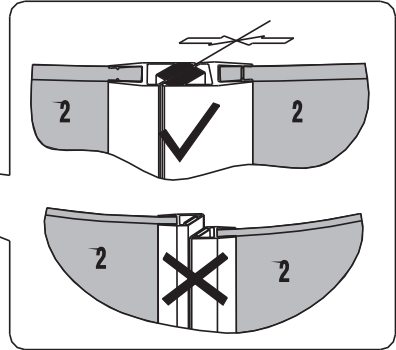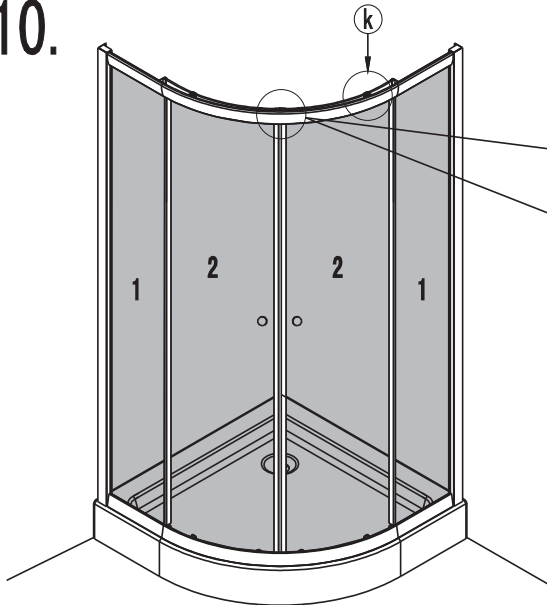



11.

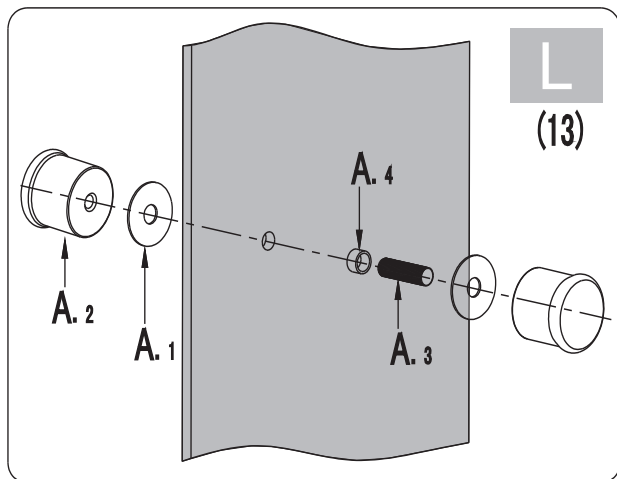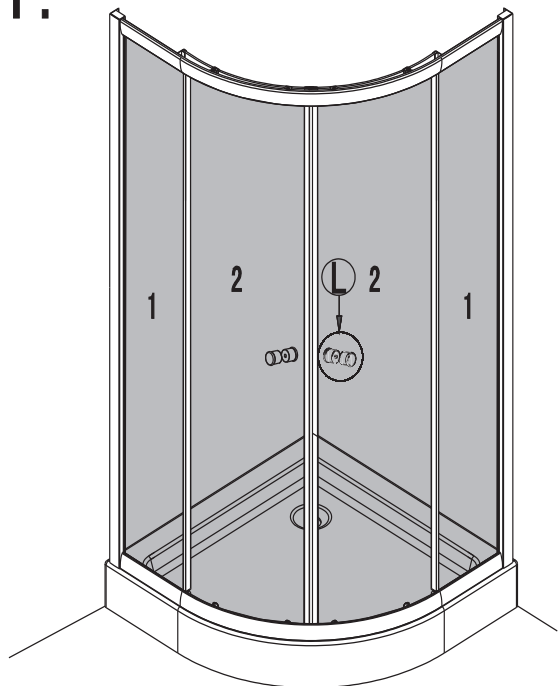



12.

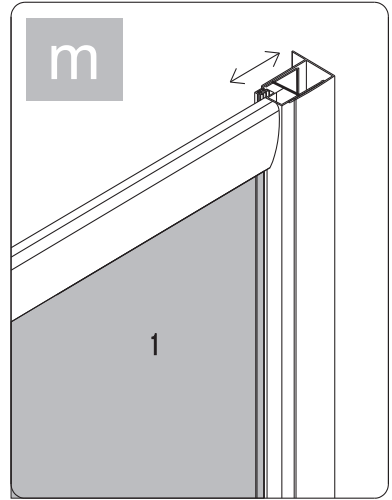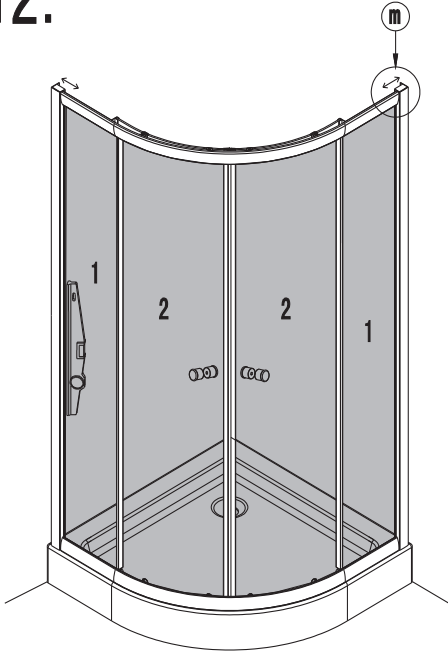

13.

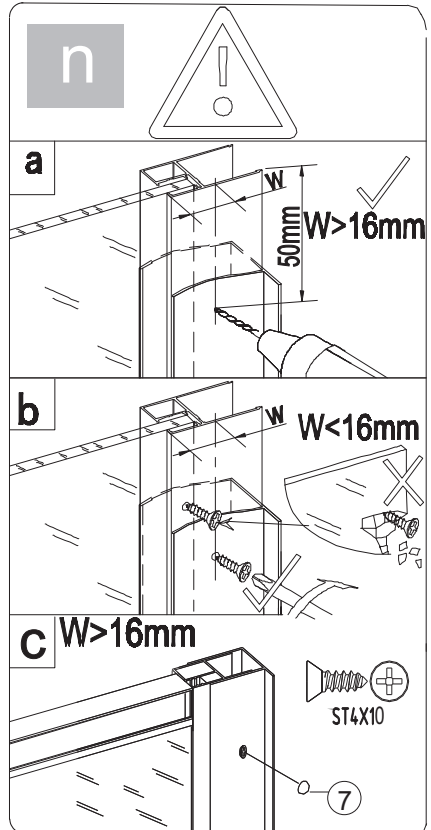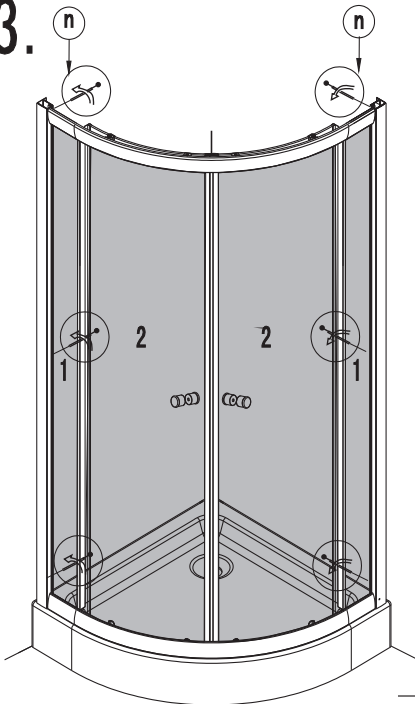

14.

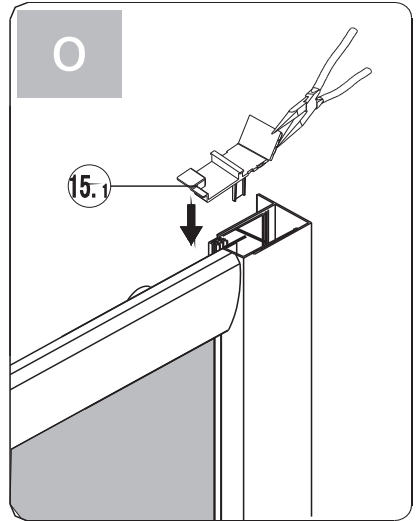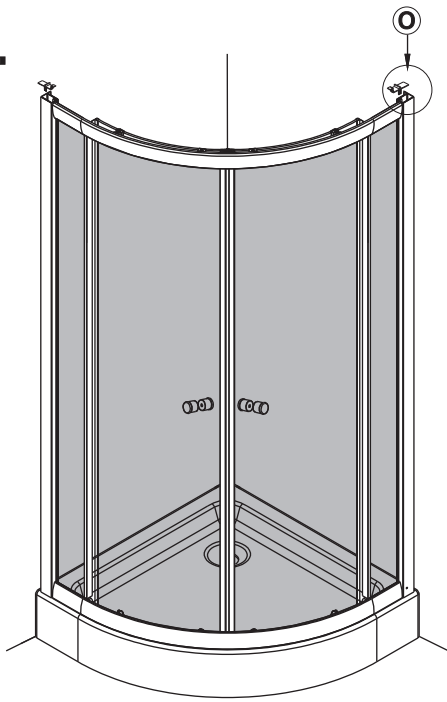

15.

