

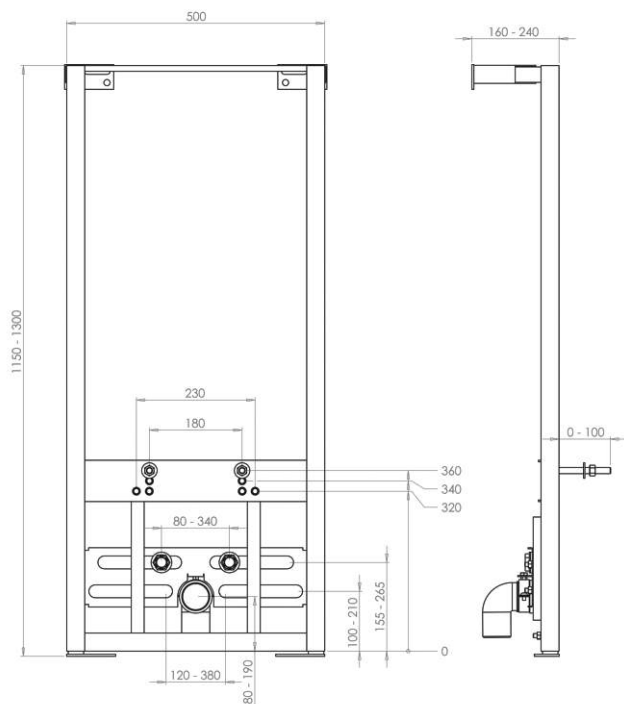
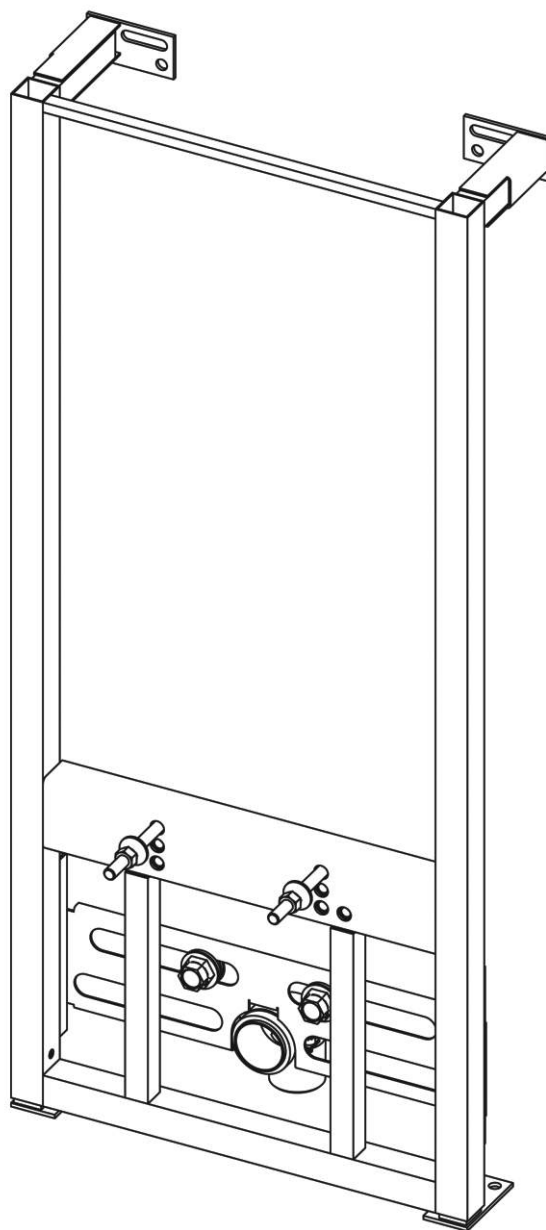
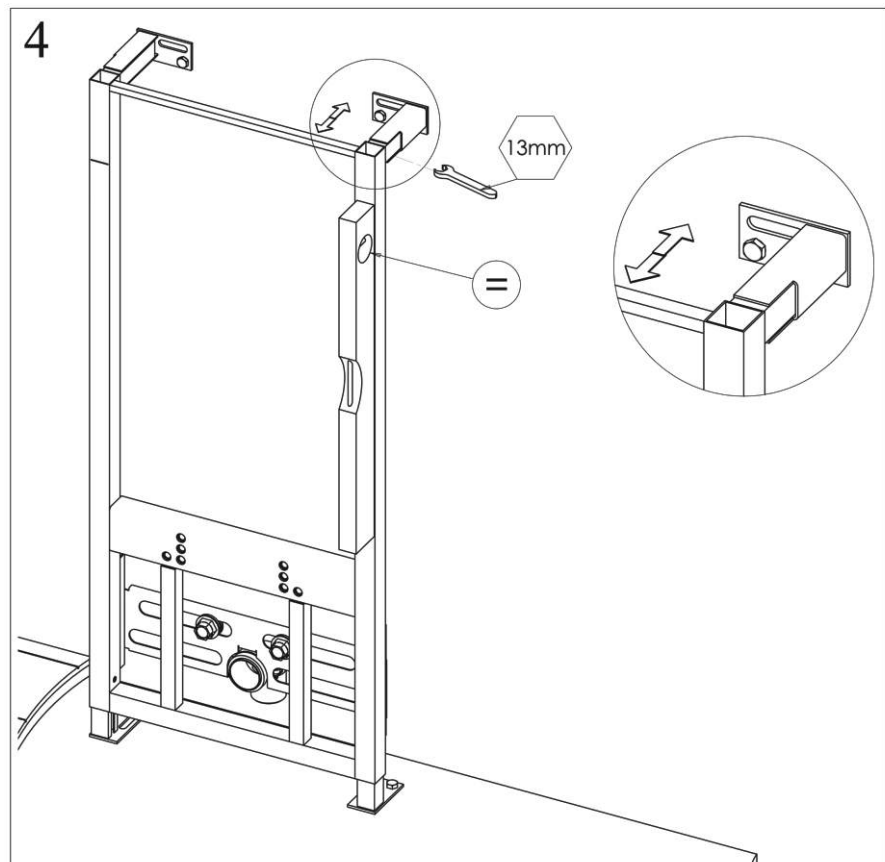
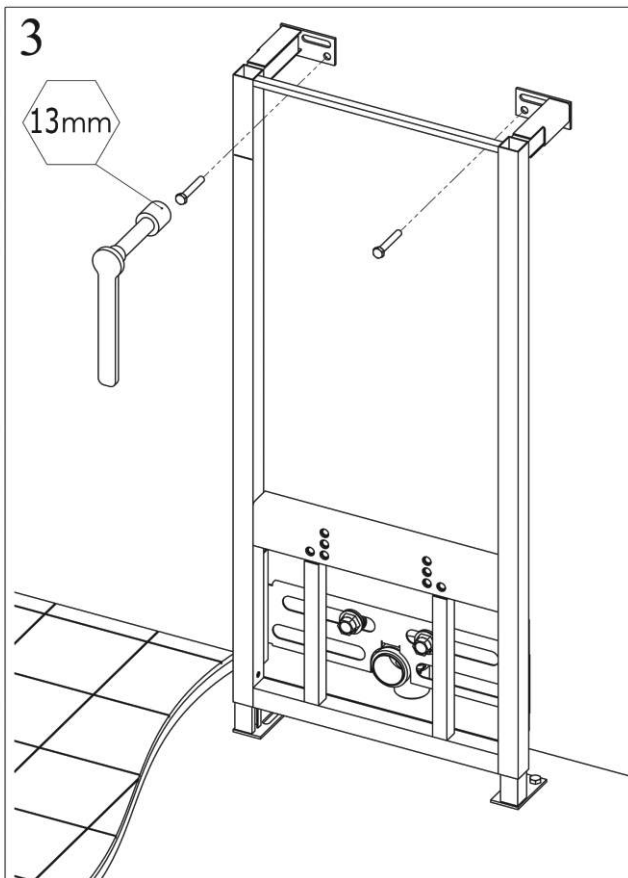



99090-000

KOLO


- Ⓟ **Instrukcja montażu**
Stelaż do bidetu
- Ⓟ **Наръчник за монтаж**
Стелаж за биде
- Ⓟ **Návod na montáž**
Instalační modul pro bidet
- Ⓟ **Installation manual**
Steel frame for bidet
- Ⓟ **Összeszerelési útmutató**
Bide tartóallvány
- Ⓟ **Manual de instalare**
Stelaj pentru bideu
- Ⓟ **Инструкция по монтажу**
Стеллаж для подвесного биде
- Ⓟ **Montážna príručka**
Instalačný modul pre bidet
- Ⓟ **Інструкція з монтажу**
Стелаж для підвісного биде

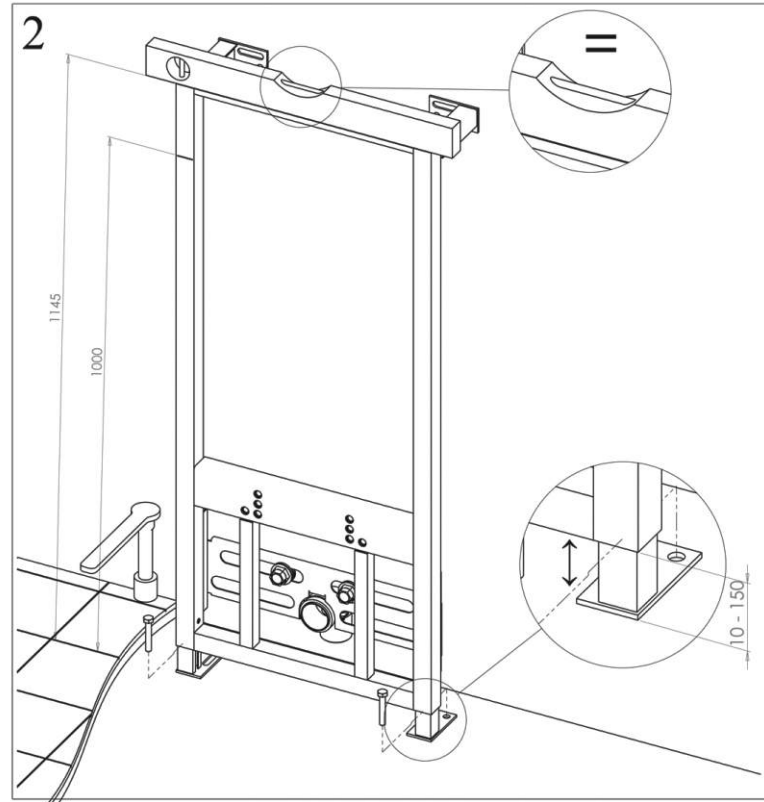


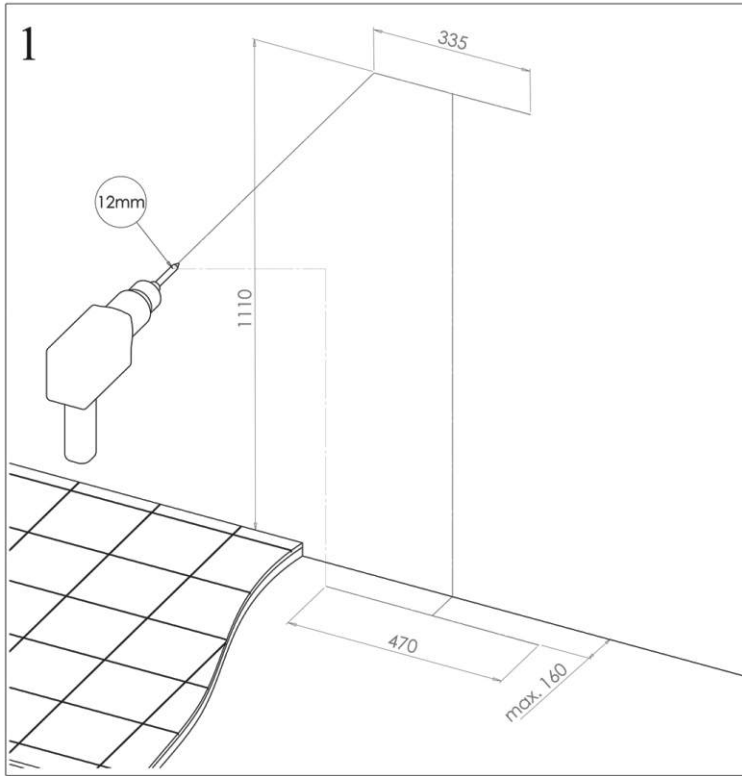


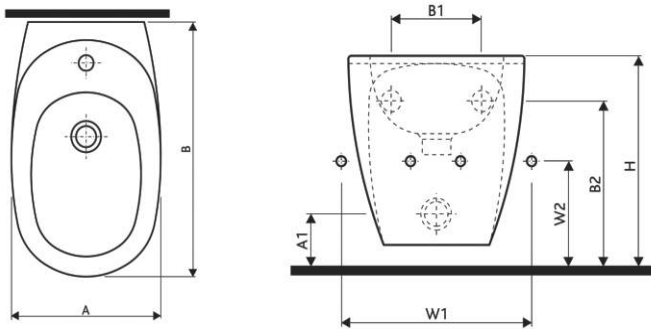


		A	B	A1	B1	B2	W1	W2	H
QUATTRO	K65110	360	600	230	180	320	100	120	400
EGO	K15100	350	570	100	180	315	380/100	200	400
APLAUZ	45100	360	610	90	180	320	360	220	400
VARIUS	K35100	355	560	120	180	315	140	140/170	400
IMPULS	K05100	370	580	120	180	320	360	235	400
CAPRICE	K75100	360	560	120	180	320	360	165	400
NOVA TOP	65100	355	560	120	180	310	360	220	400
PRIMO	K85100	326	540	120	180	320	360	220	400

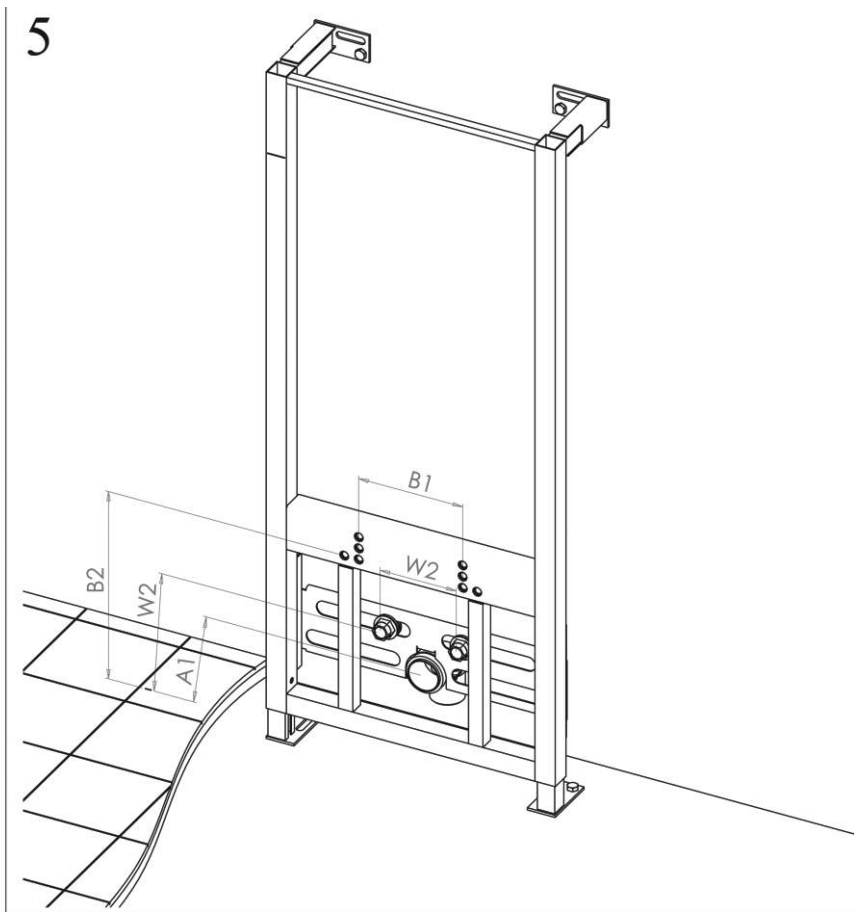

6

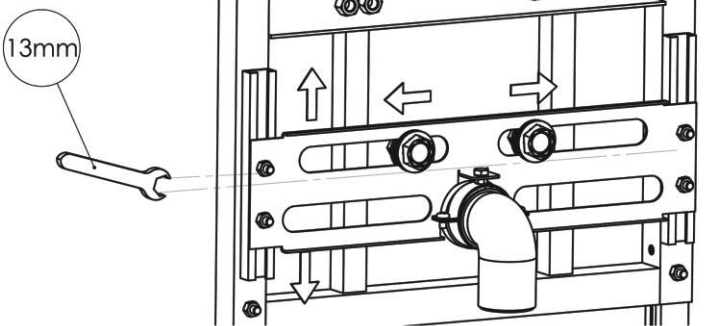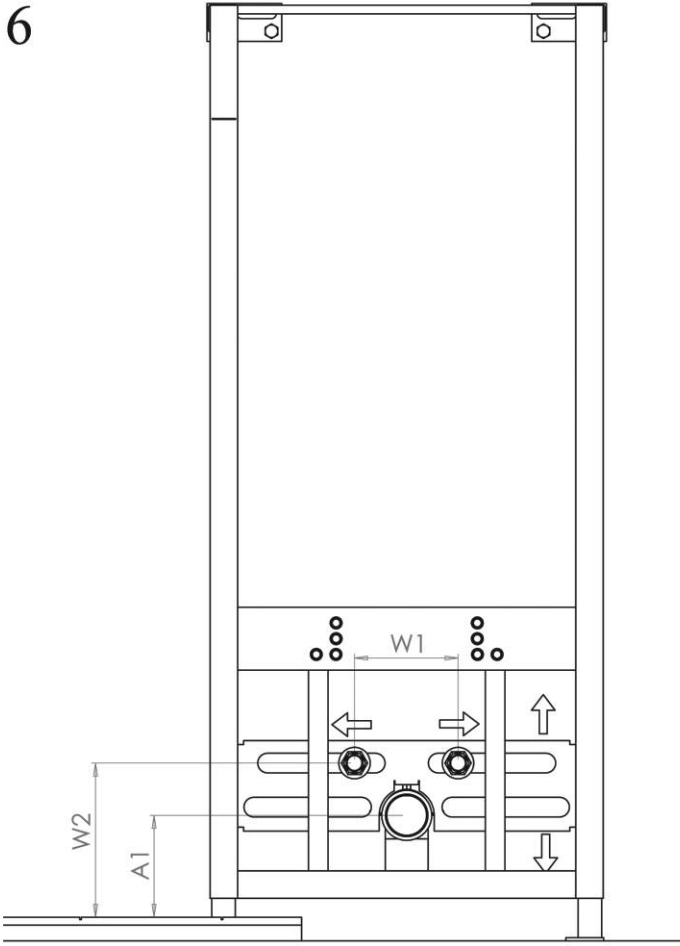

7

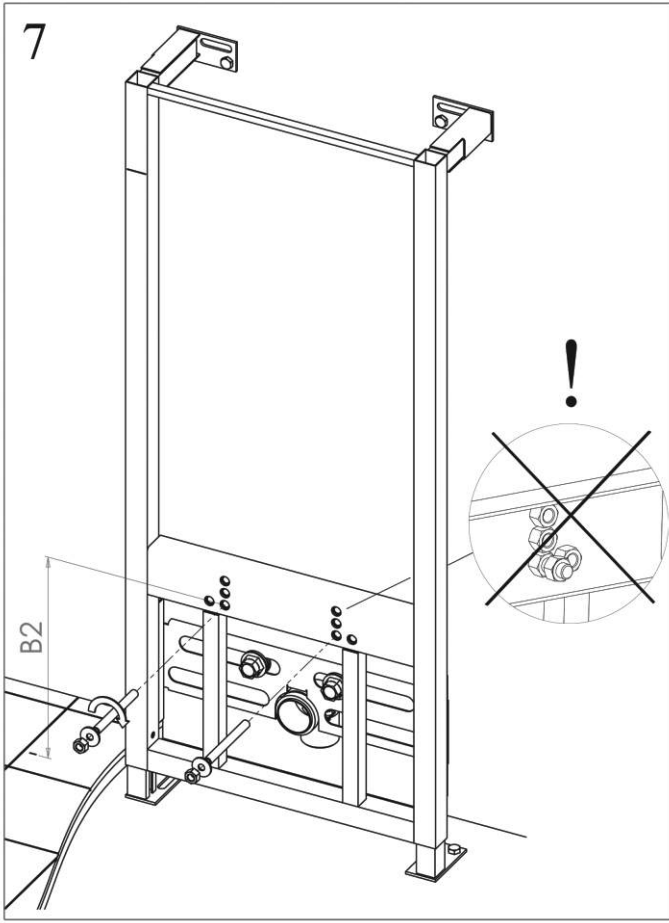

8

