




# SANPLAST.

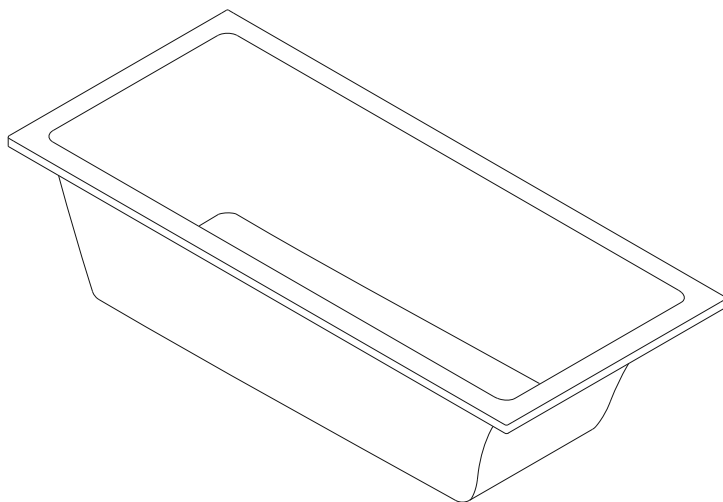


(01) 2000000152980(94)


- PL** Instrukcja montażu wanny bez stelaża przestrzennego
- DE** Montageanweisung Badewanne ohne Sondergestell
- GB** Bathtub without spatial frame installation guide
- FR** Notice de montage de la baignoire sans ossature spatiale
- RU** Инструкция по установке ванны без каркаса
- CZ** Návod k montáži vany bez samonosné konstrukce
- RO** Instrucțiunile de montaj pentru cadă fără cadru spațial
- HU** Lábszerkezet nélküli kád szerelési útmutatója
- SK** Návod na montáž vane bez priestorovej konštrukcie



**A**

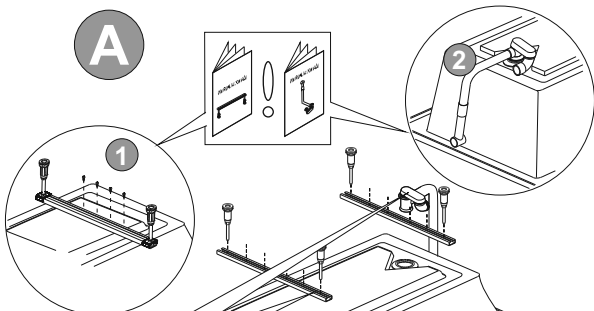


**B**

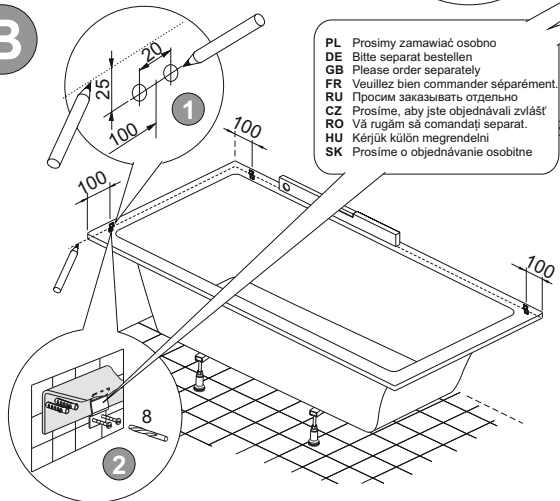


PL Prosimy zamawiac osobno  
 DE Bitte separat bestellen  
 GB Please order separately  
 FR Veuillez bien commander séparément.  
 RU Просим заказывать отдельно  
 CZ Prosimě, aby jste objednávali zvlášť.  
 RO Vă rugăm să comandați separat.  
 HU Kérjük külön megrendelni  
 SK Prosimě o objednávanie osobitne

**2**



**C**

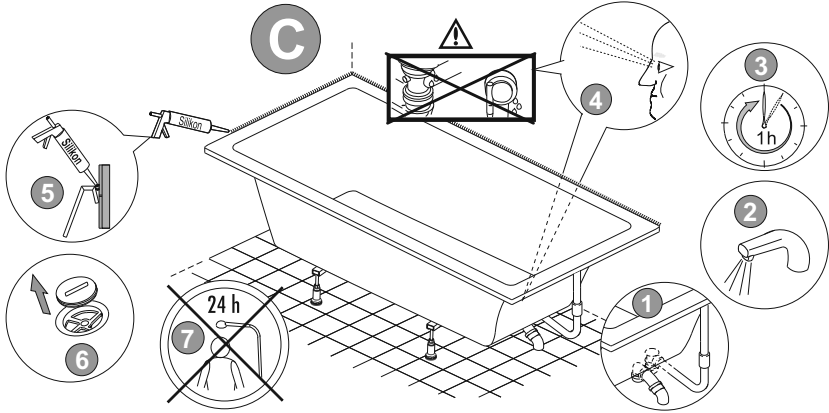

# SPACE LINE

